





✦ READER PLATES Quick Reference for the Amazon Kindle DX

Best View Settings:




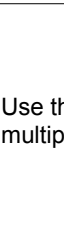 
Reader Plates are formatted for use with a specific text-size and line-width on the Kindle DX.

Press  the key on your Kindle and ensure your settings match the example to the right.

Note: Automatic screen rotation can be disabled with the setting at the bottom.

Aa	Aa	Aa	Aa	Aa	Aa
Words per Line		fewest	fewer	default	
Text-to-Speech		turn on			
Speech Rate		slower	default	faster	
Speaking Voice		female	male		
Screen Rotation		auto			

Buttons:

	Move the 5-way controller left or right to jump to the Identifier index or table of contents. Then tap the controller towards you to scroll down the list of options and press the controller to select an option.
	Press the BACK button to return to move back through the history of table of contents pages visited. (Or if you accidentally make a selection you didn't want, hit the BACK button to try again.)
	Use the 'NEXT PAGE' and 'PREV PAGE' buttons to page through multiple-page tables of contents and books.
	

Stick Counts:

Each table-of-contents item lists the number of 5-way controller "stick" pulls necessary to select that item. Use these counts to accelerate the selection process by noting the number listed to the right of the desired selection, then quickly pulling and releasing the 5-way controller stick that many times. Then press the stick to make the selection.

Maximizing Battery Life:

Hold the power slider until the screen blanks. This puts the reader into sleep mode to preserve battery power.

Screen-saver Mode:

The Kindle DX display screen-saver images if no buttons are pressed for 10 minutes. You can reset this 10 minute timer by pressing any key on the keyboard before the screen-saver is activated. Once the screen saver is displayed, slide the power switch to reactivate the reader.

How Reader Plates are Organized:

Reader Plates are sorted by State, City, Airport Name, and procedure type, just like paper plates. On the Kindle DX, plates are organized into one book for each region of the U.S. Most regions include procedures for multiple states, and inside each book, the "Table of Contents" begins with State names, and extends down through City name, Airport name, Procedure type, and finally Procedure name.

This example shows the branches for selecting the ILS to 17L at Austin Bergstrom Intl:

- Home
- ...
- Reader Plates #####: South Central U.S.
 - Texas
 - ...
 - AUSTIN
 - (AUS) AUSTIN-BERGSTROM INTL
 - AIRPORT DIAGRAM
 - AIRPORT / FACILITY DIRECTORY
 - (AUS) Approaches
 - ...
 - ILS RWY 17L
 - ...
 - (AUS) Arrivals
 - (AUS) Departures
 - ALTERNATE MINIMUMS
 - TAKE-OFF MINIMUMS
 - (3R9) LAKEWAY AIRPARK
 - BALLINGER, (E30) BRUCE FIELD
 - BAY CITY, (BYY) BAY CITY MUNI
 - BAYTOWN
 - ...
- Reader Plates #####: South West U.S.
- ...



Airport Identifiers:

If you have the Airport Identifier and Region, but do not know the corresponding State, City, and Airport name, then you can use the "Airports by Identifier" index at the front of each book. Just click the 5-way controller to the left once or twice to jump to this index. Then use the "NEXT PAGE" button and the 5-way controller again to select the appropriate identifier.



Reset:

If the Kindle stops responding, hold the power slider for more than 20 seconds to reset.